



Assembling instruction

800 / 900mm

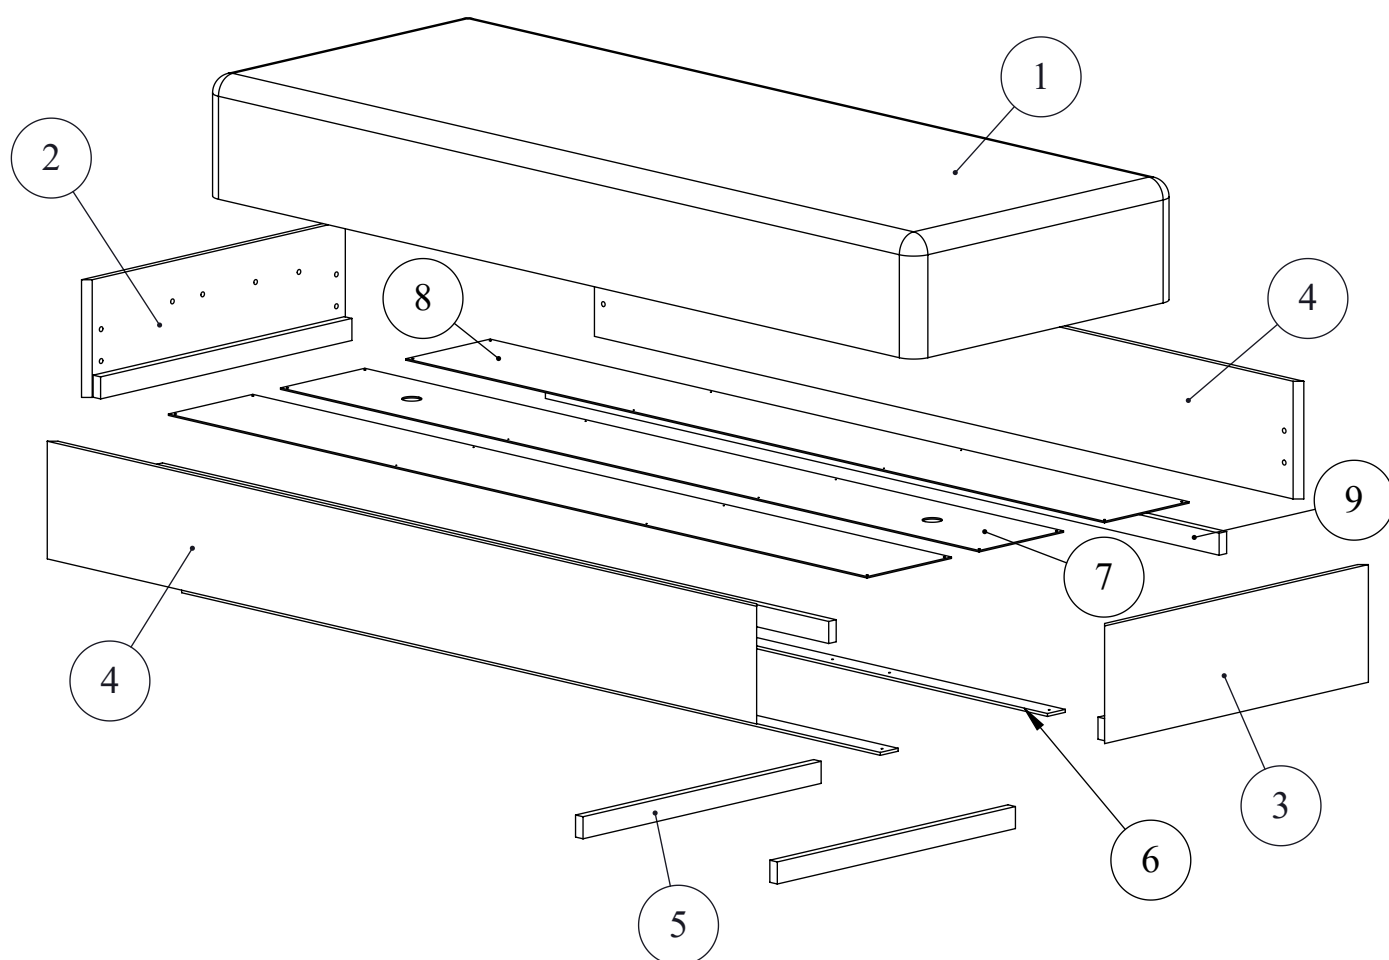


①	x1	⑥	x2
②	x1	⑦	x1
③	x1	⑧	x2
④	x2	⑨	x2
⑤	x2		

1200mm


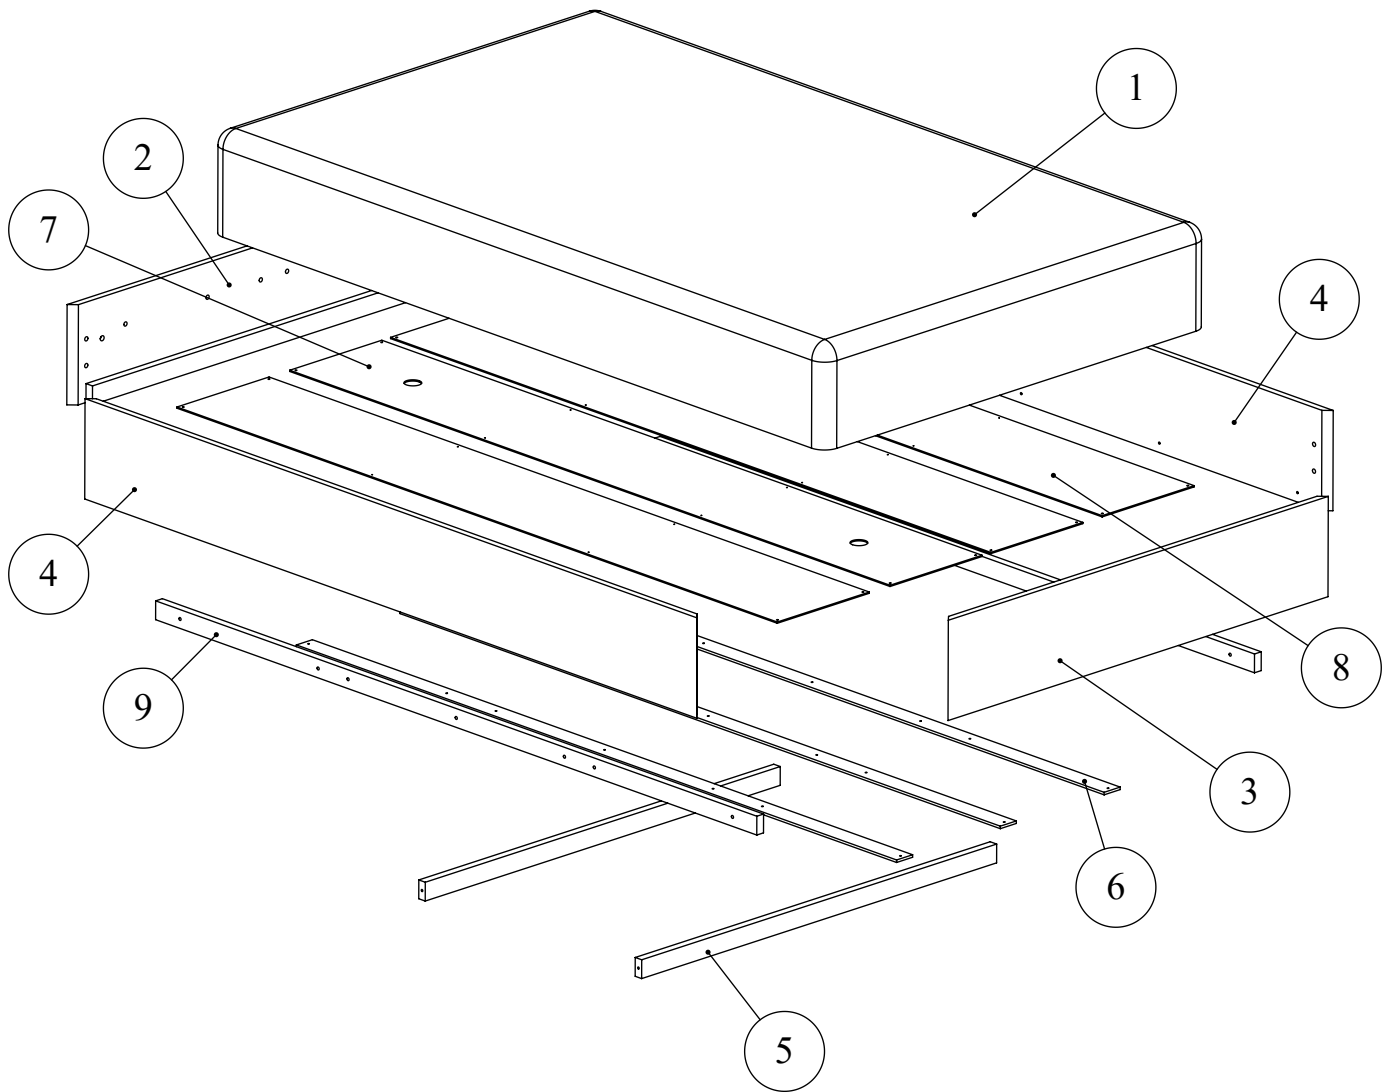


①	x1	⑥	x3
②	x1	⑦	x1
③	x1	⑧	x3
④	x2	⑨	x2
⑤	x2		


1400mm

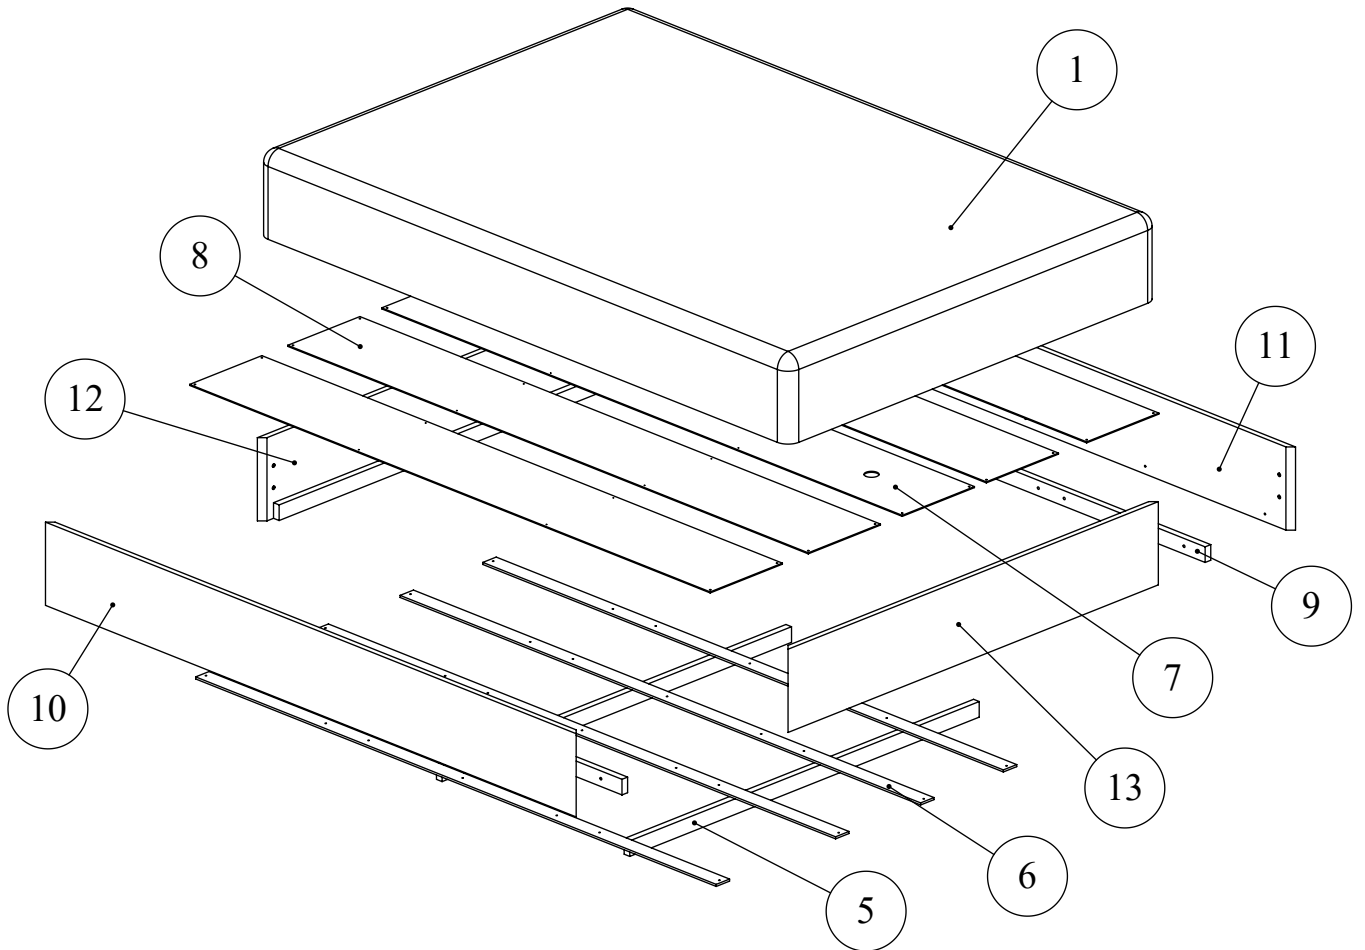


①	x1	⑨	x2
⑤	x2	⑩	x1
⑥	x4	⑪	x1
⑦	x1	⑫	x1
⑧	x4	⑬	x1

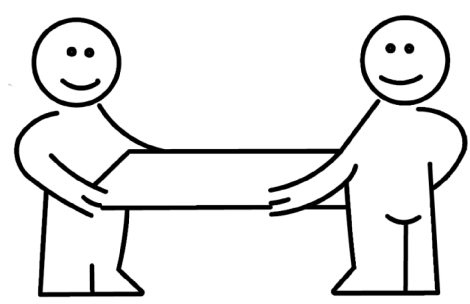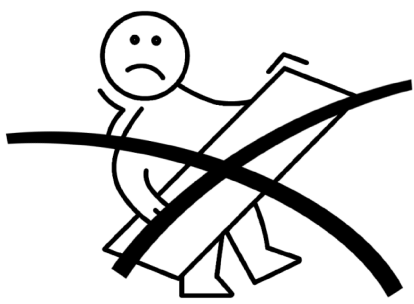


IMPORTANT - TWO PERSONS MINIMUM !!!

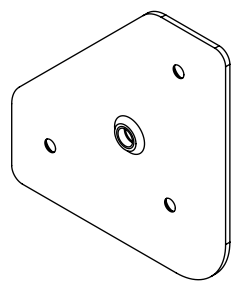


Ax4




Bx4

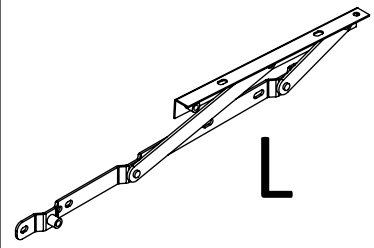

Cx1

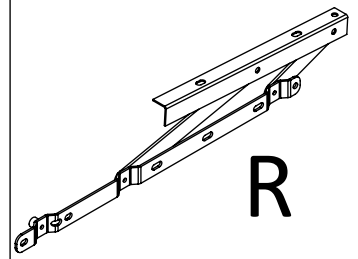


Dx1

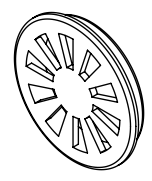


Ex2



Fx10

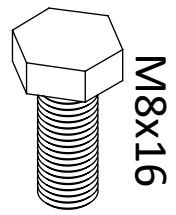


Gx4

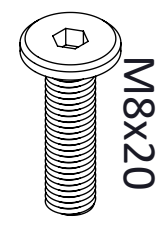


Hx28




Ix4

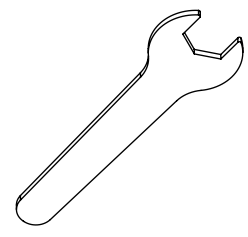


Jx1

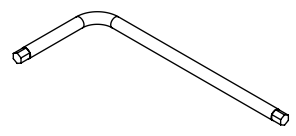


Kx1

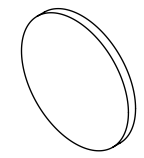


Lx4

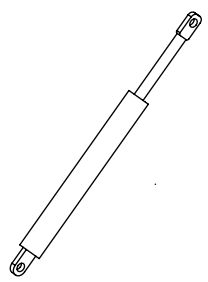


Mx2

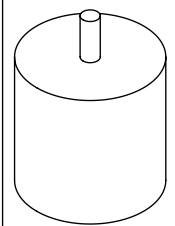


Nx4

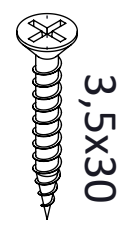


800/900mm **Ox20**
1200mm **Ox24**
1400mm **Ox28**











Px1

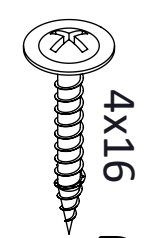

800/900mm **Rx24**
1200mm **Rx32**
1400mm **Rx40**

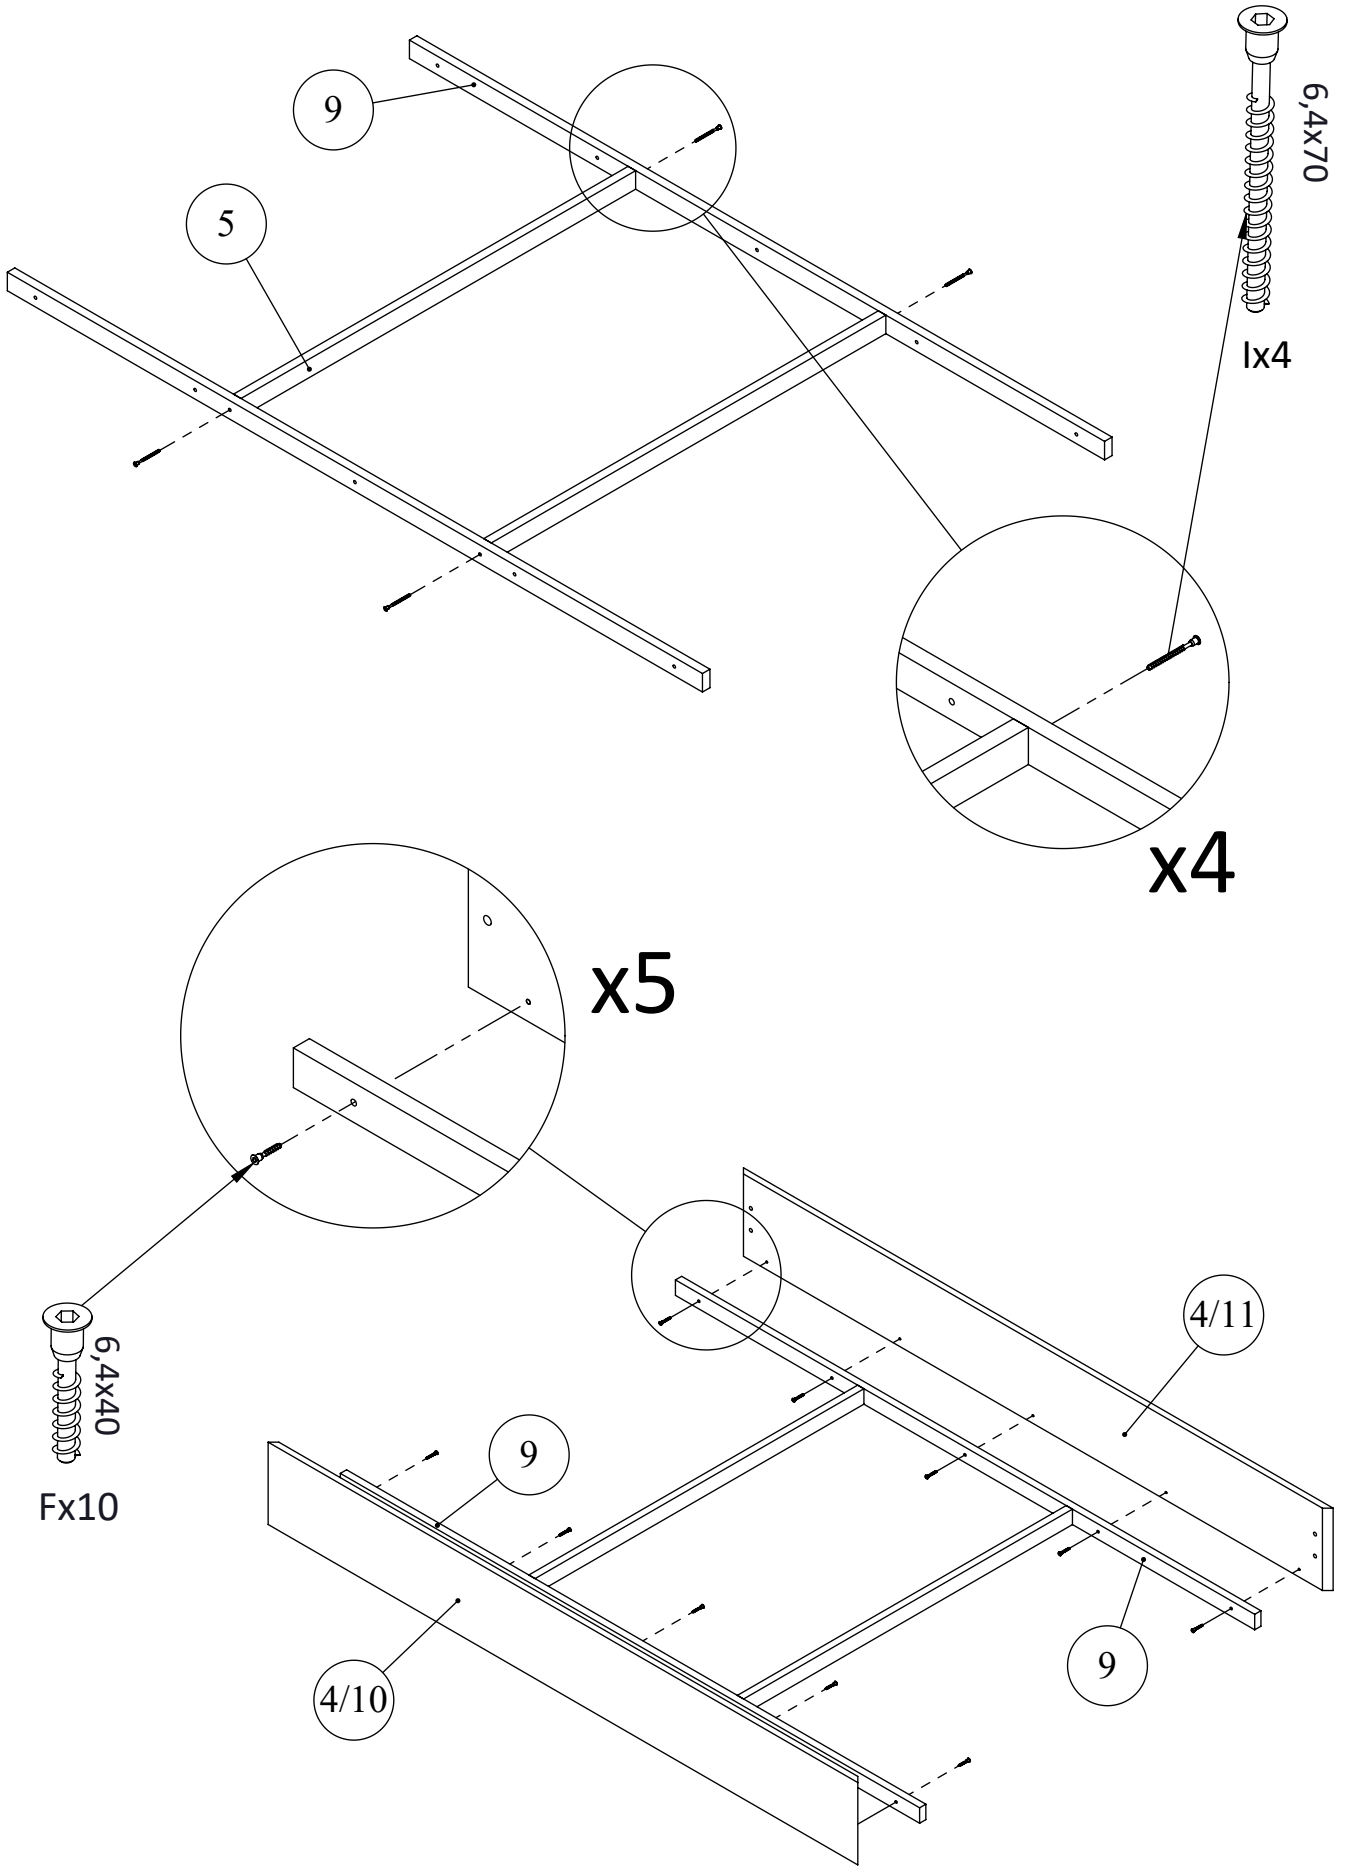


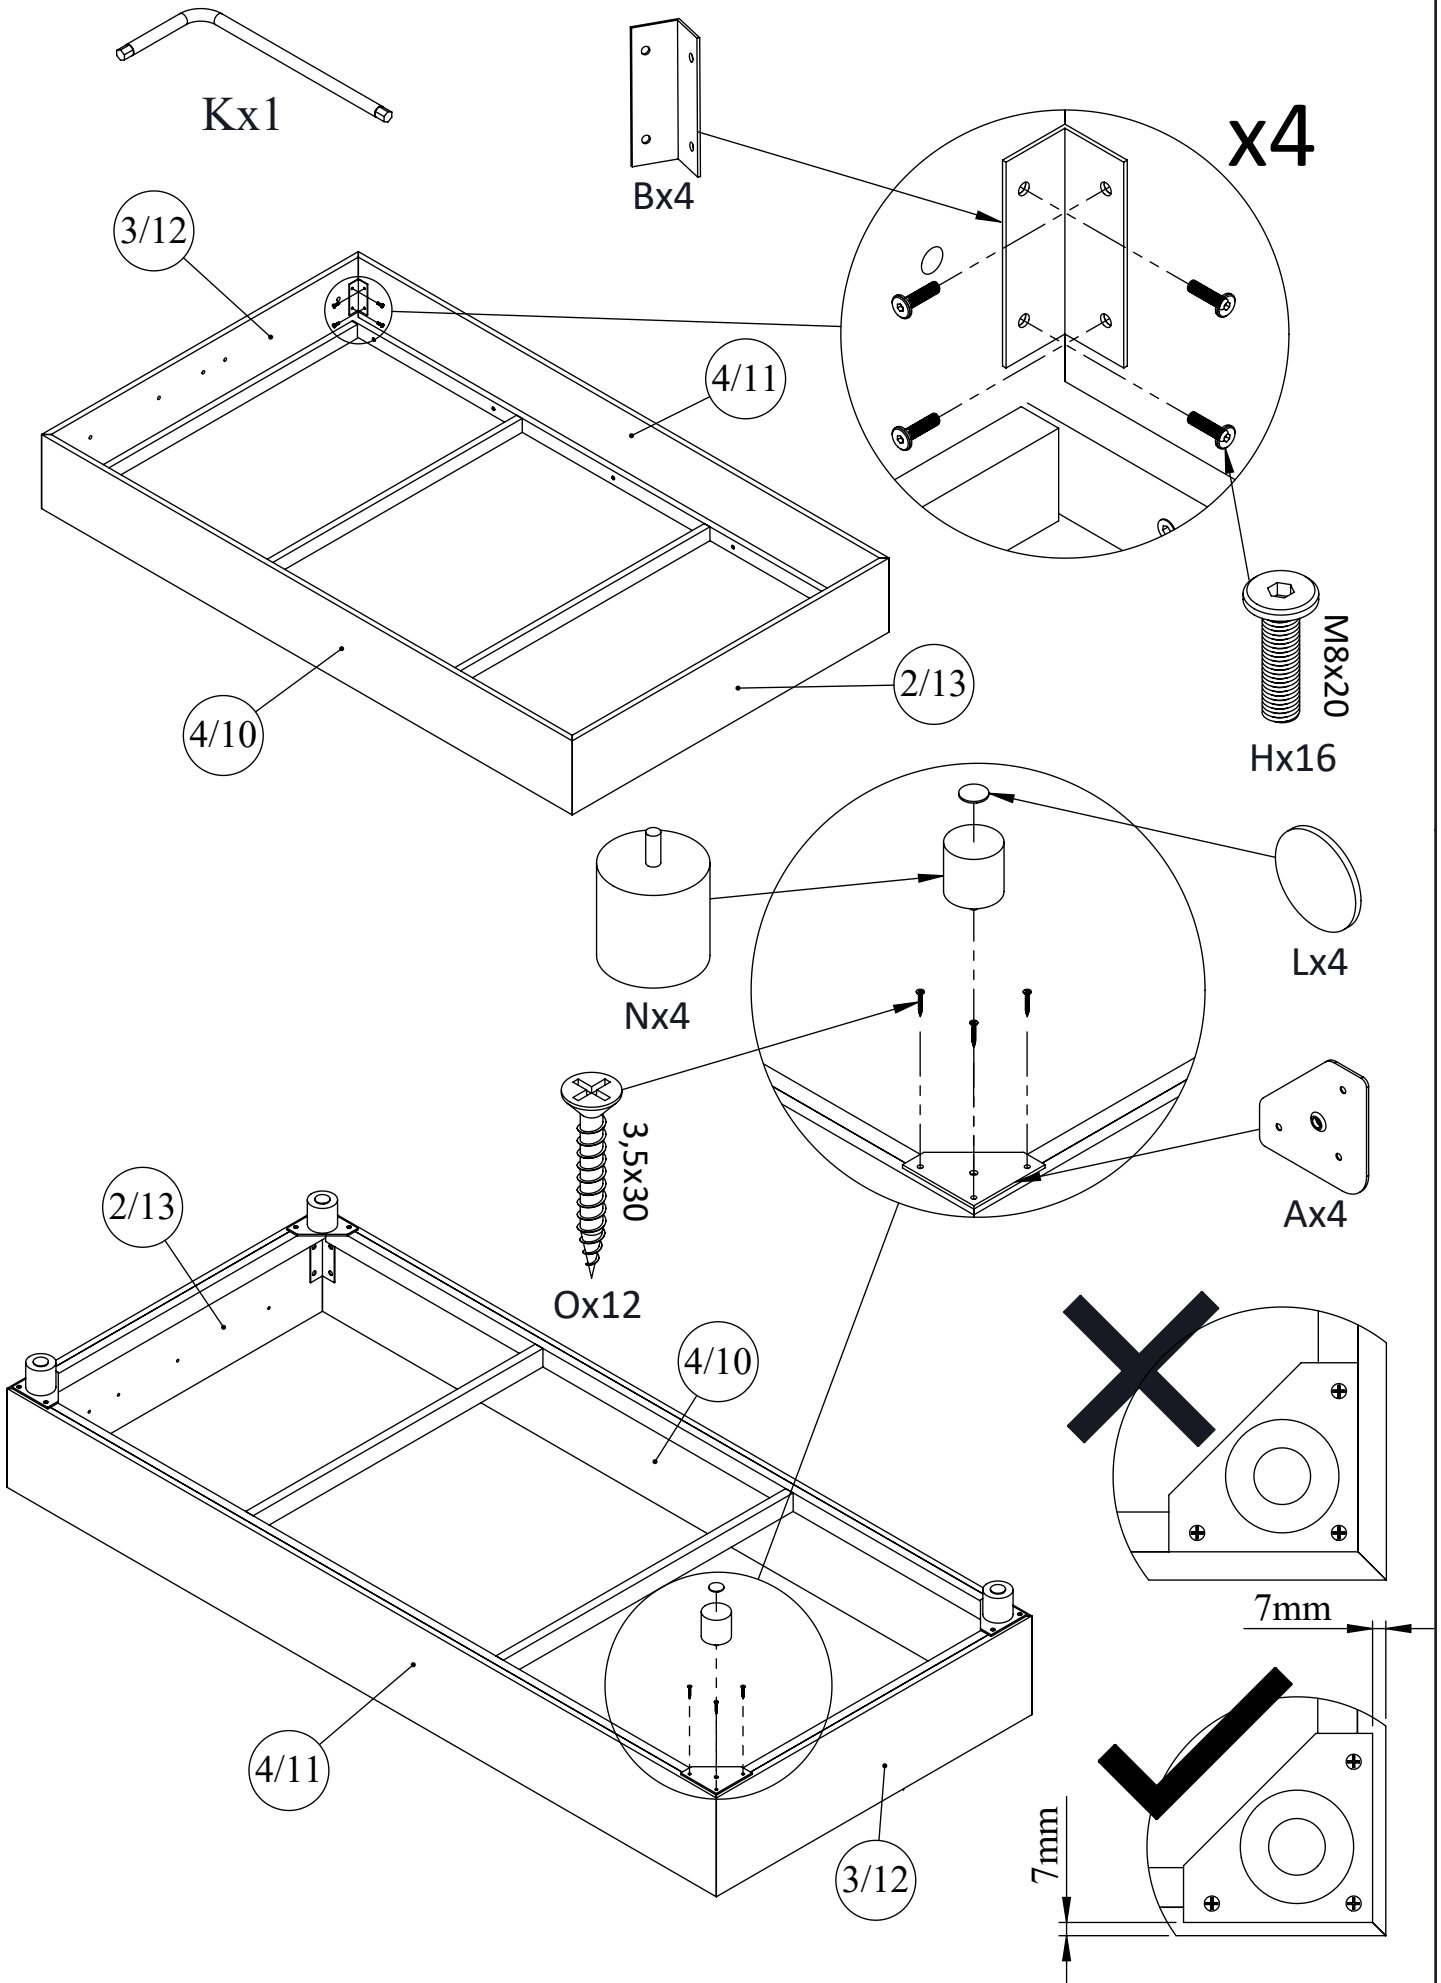

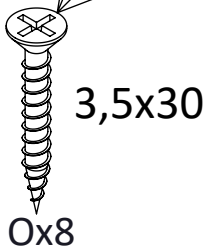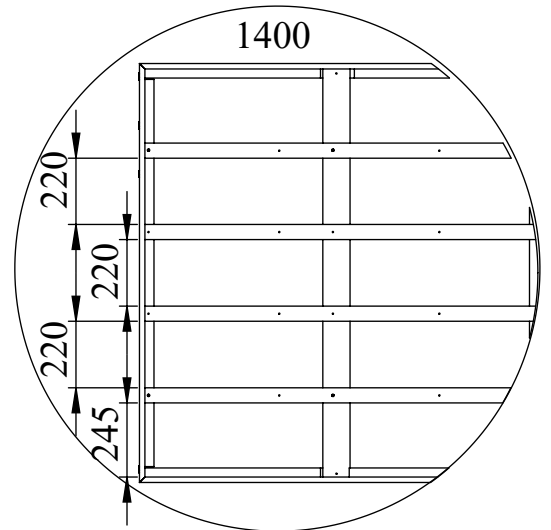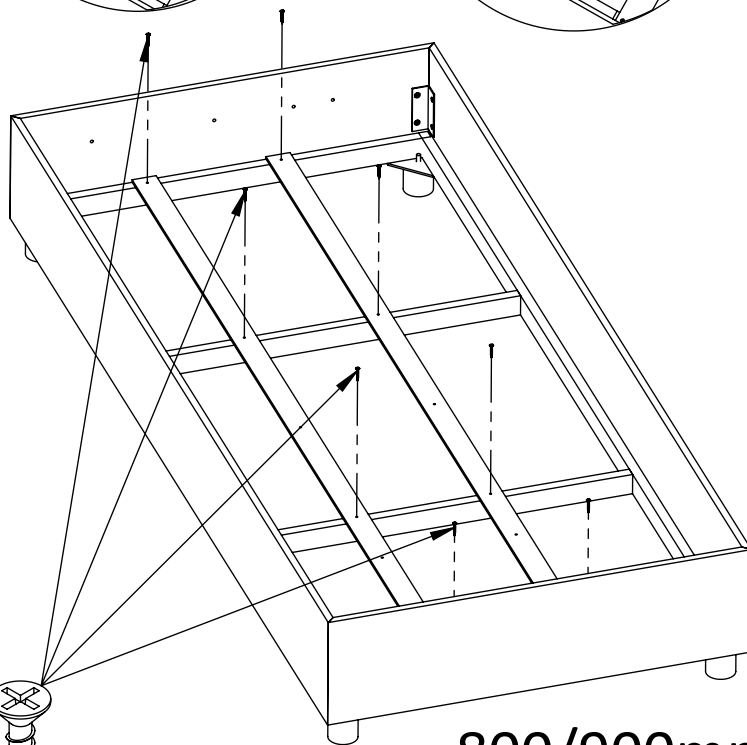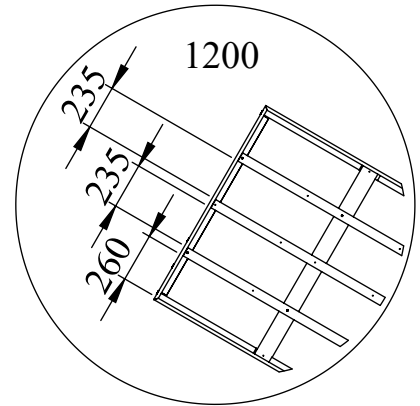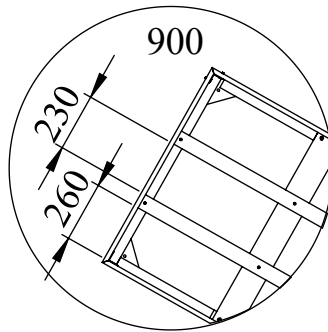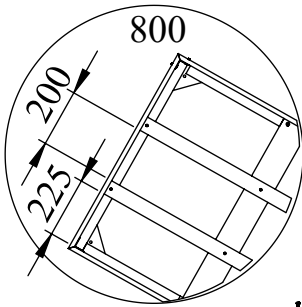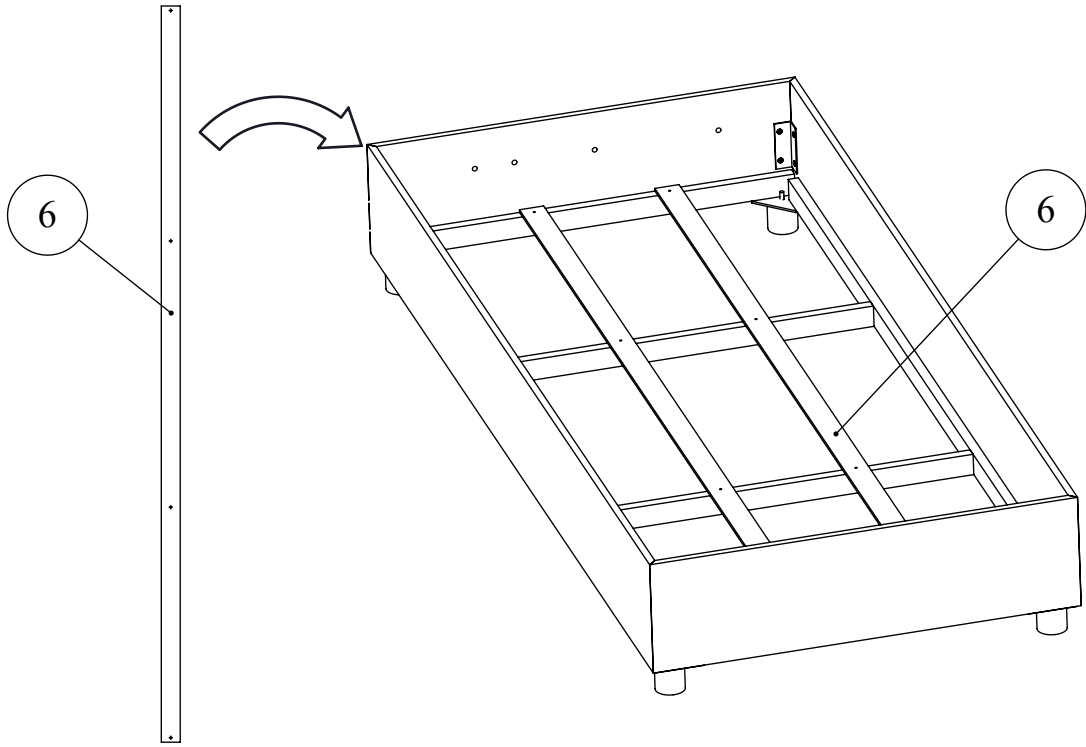


800/900mm **OX8**
1200mm **OX12**
1400mm **OX16**



800 / 900 / 1200 / 1400mm

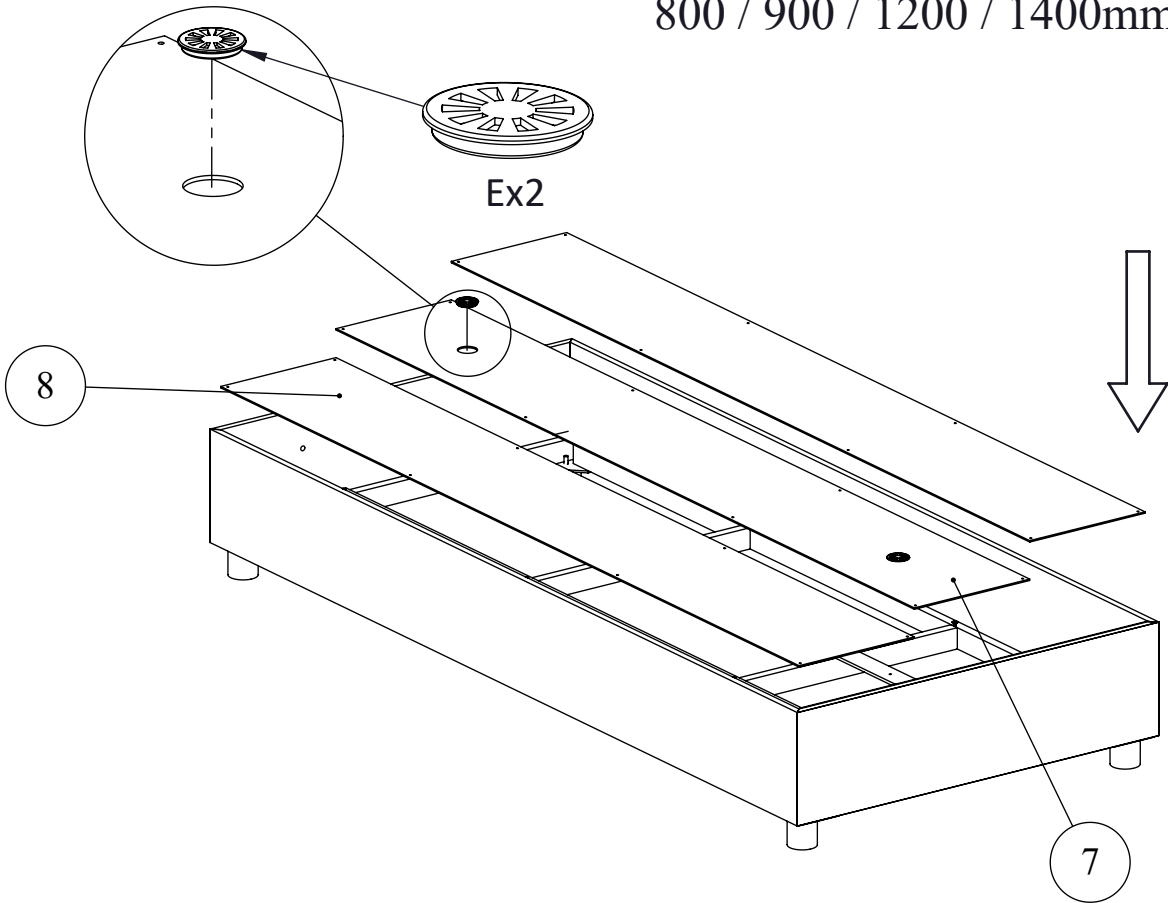

800 / 900 / 1200 / 1400mm

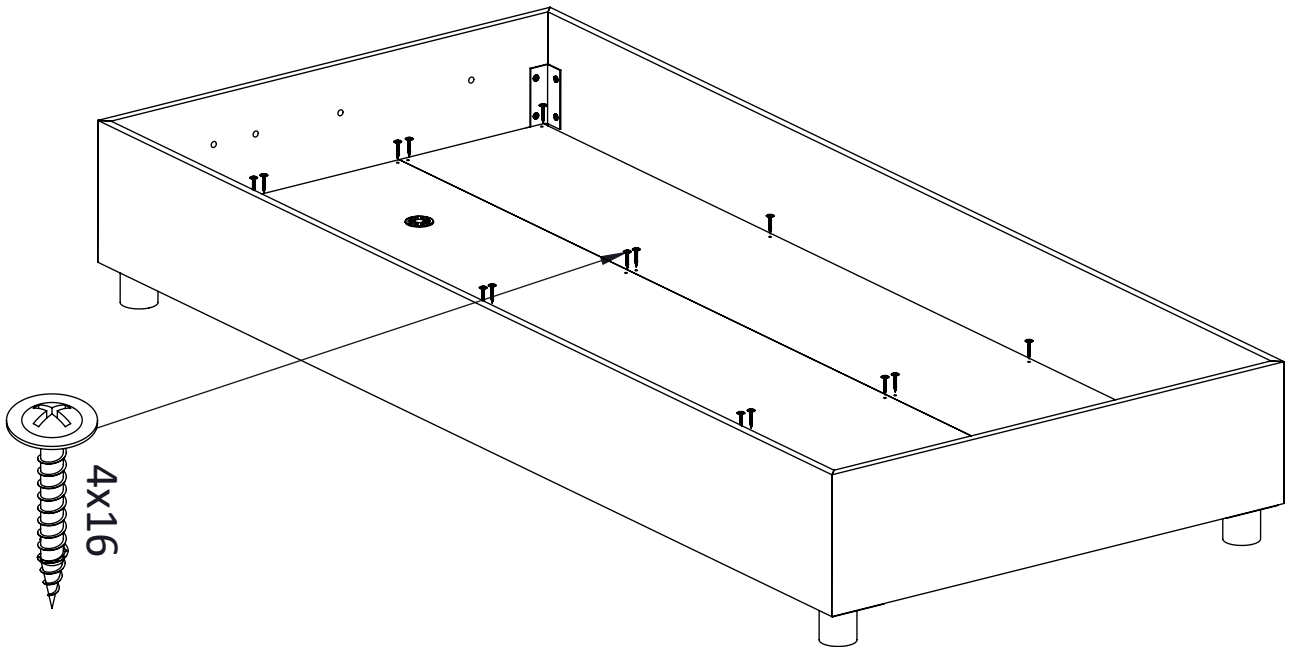

800/900mm **Rx24**
1200mm **Rx32**
1400mm **Rx40**

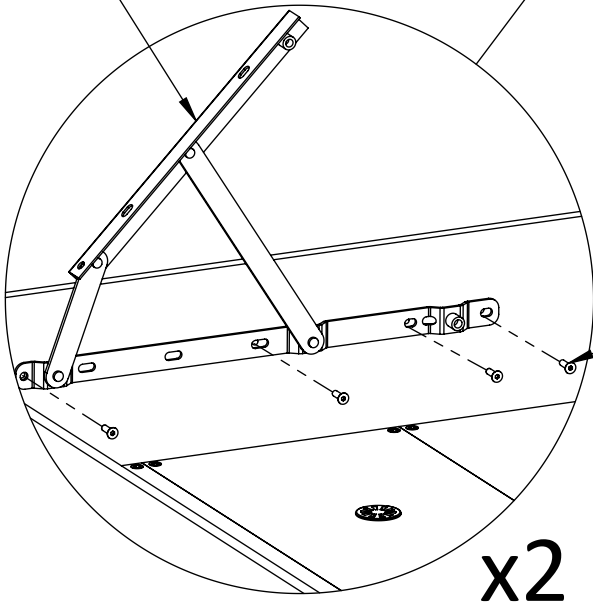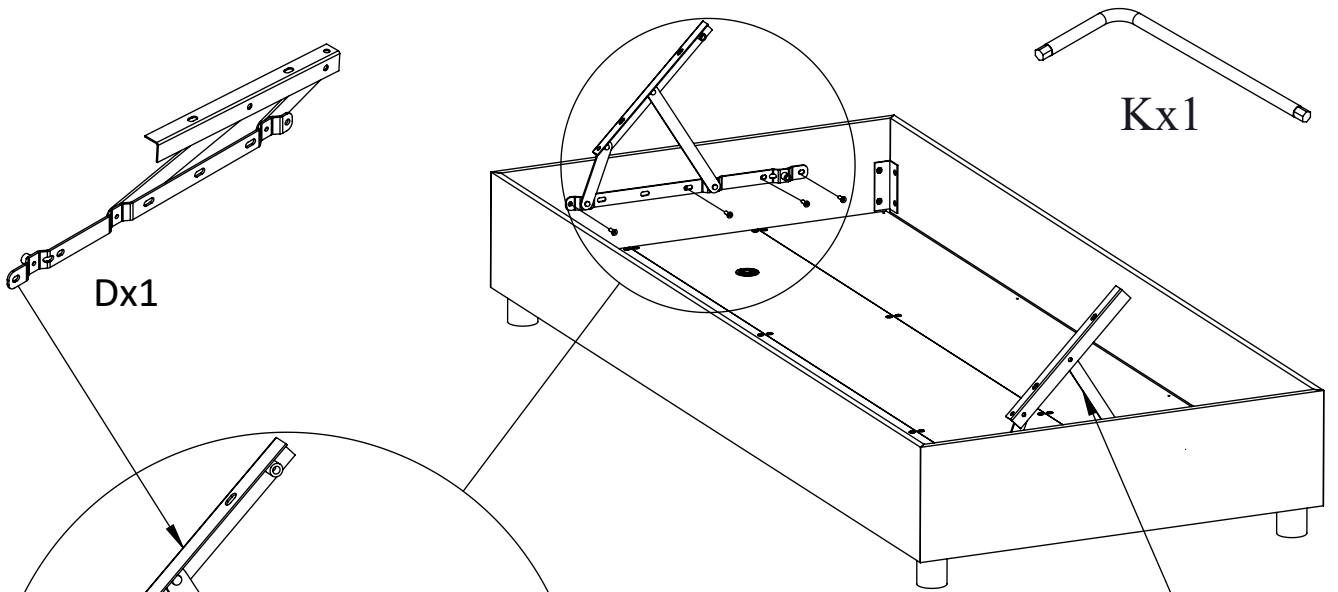


(H) screw all bolts 50%




Hx8

M8x20


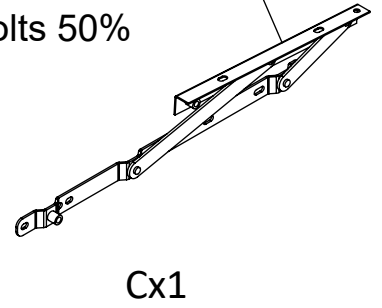


Cx1


x2

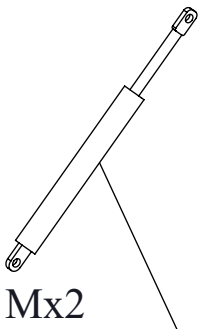

Mx2

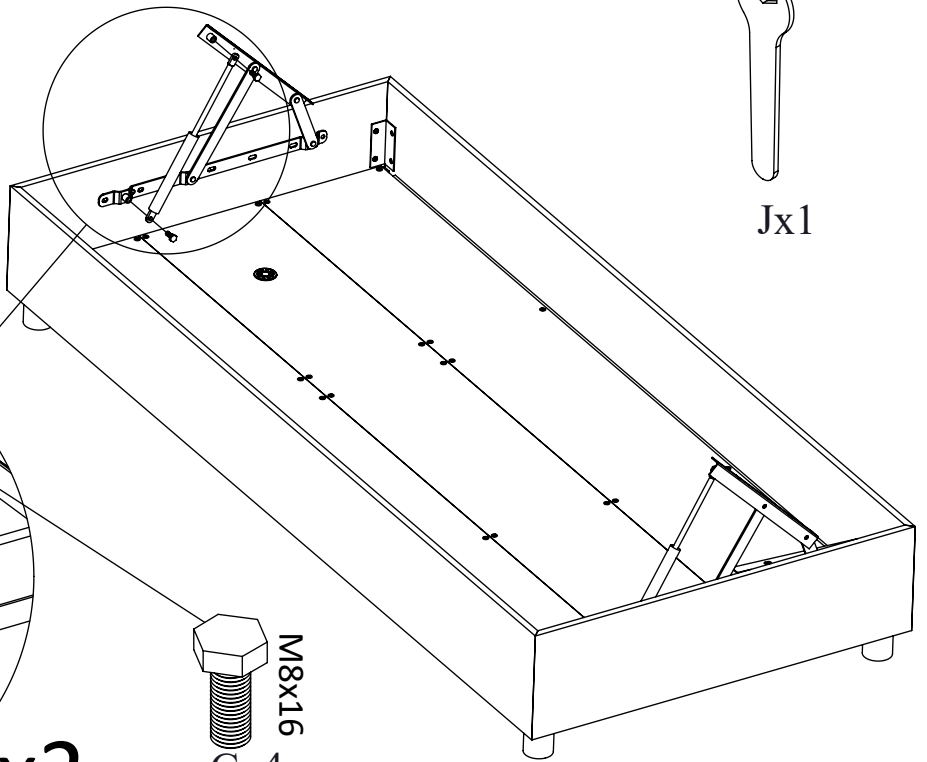

Jx1


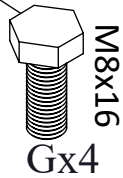


Gx4




M8x16

x2

(H) screw all bolts 50%




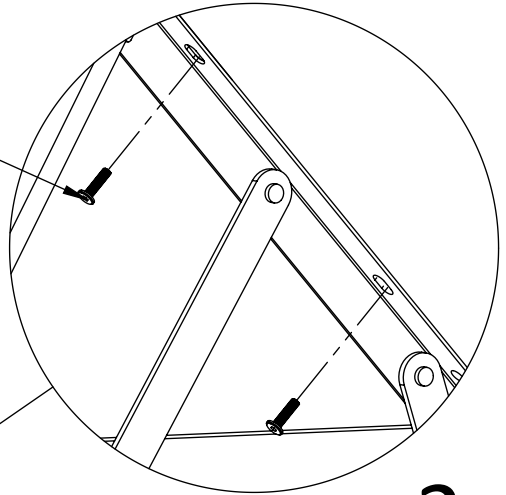
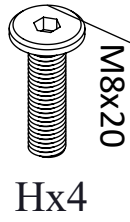


x2

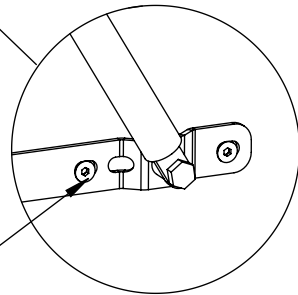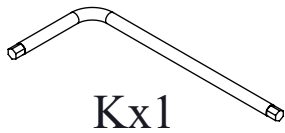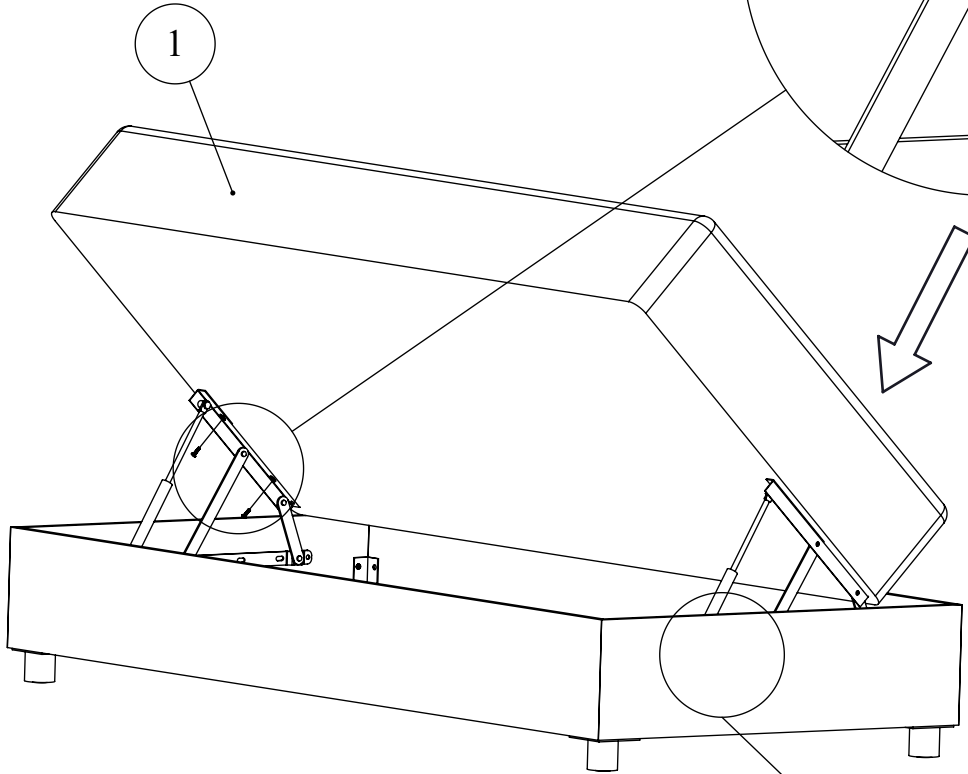

x2

(H) screw all bolts 100%

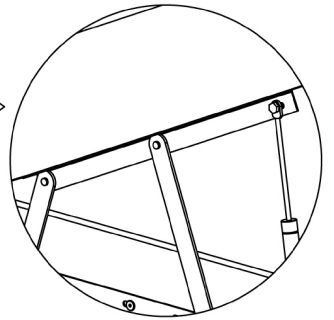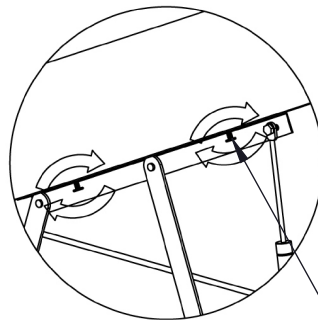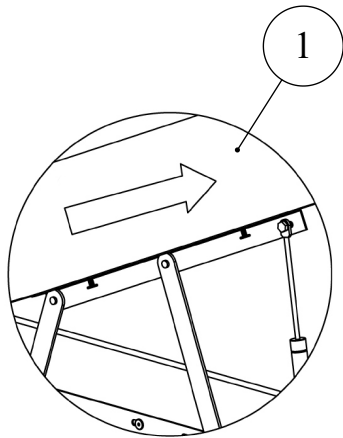

(H) screw all bolts 100%

